
# NPS TRADITIONAL STYLE EXHIBIT (FRAME) ASSEMBLY AND SURFACE MOUNT INSTALLATION

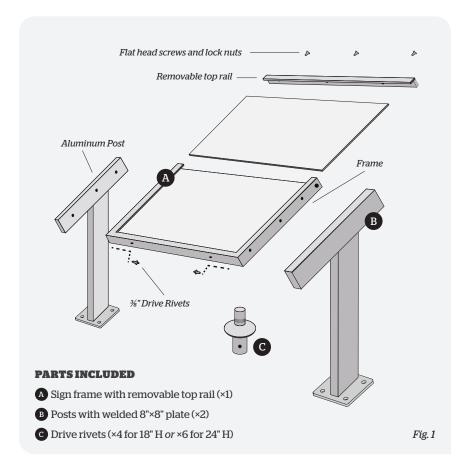

## **TOOLS REQUIRED**

5/32" Allen driver 7/16" socket Hammer


#### **ASSEMBLY DIRECTIONS**


- Unpack all parts and inspect for damaged or missing items.
- Arrange all items for assembly using corrugated packaging to protect items from damage.
- 3. Verify that removable rail is in top position.
- 4. Attach the legs to the sign frame using drive rivets. With two people, lay one leg with the rivet holes up on a flat surface. Align the frame's rivet holes perpendicular to the post's holes. Verify that the removable rail is "up". Install rivets and punch rivet pin into rivet with a hammer. Repeat for the other leg, provide stabilization for the first leg during assembly.

# **SURFACE MOUNT**

### **INSTALLATION**

Consult a professional to determine the correct installation hardware for your particular surface. If installing to a concrete pad, you will need to know the thickness of the pad to select proper hardware.



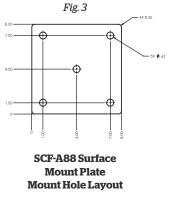

8×8×¾" aluminum (with center drain hole)

